



 

OUTDOOR NIGHT LIGHT POWER BANK

SKU:PD-PBFCH030

Before installing and using the product, please carefully read this User Manual to guarantee correct usage.

(Please keep this instruction manual securely for future use.)

Product Schematic Diagram

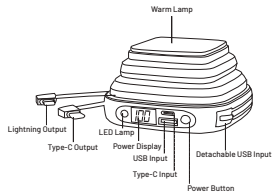

Basic Functions of the Product

1. Click the power switch and turn the device on.
2. Double-click the power button to activate the LED lamp.
3. Double-click again to deactivate the LED lamp.
4. Press and hold the power button to switch on the Warm Lamp.
5. Press and hold again to switch off the Warm Lamp.

Input	5V \pm 1A-2.1A (Max)
Output	5V \pm 1A-2.4A (Max)
Working Temperature	-10 °C ~ +45 °C
Implementation Standard	GB/T35590-2017

Battery Status

Press the key to display the battery's current charge level. Auto sleep mode initiates after 60 seconds of inactivity if the device is not used. Recharge the device when the battery level is low.

Instructions for Use

1. Charge the device using the included charging cable or your own compatible cable connected to the USB input.
2. You can also charge via a data cable connected to the device's USB port.
3. Alternatively, use a USB-C adapter for charging.
4. Method 1: Use the USB adapter provided.
5. Method 2: Connect the included accessory line to an adapter and then to the DC-IN interface of the product and connect the USB end to a computer or 5V adapter. The indicator will flash when charging and remain lit once fully charged.
6. Charging Method for a Computer USB: Connect the included accessory line to an adapter, then plug it into the product's DC-IN port. Connect the other end to a computer's USB port. The charging indicator will flash and stay lit when the battery is fully charged.
7. Fully Charging the Device Before First Use: Charge the device fully before its initial use or if it has been stored for an extended period. The built-in battery will display as fully charged once the process is complete.

Charging Mobile Phones and Digital Devices

*Use the provided data line or your own charging cable to connect to the device's suitable charging port. Use only the original charging cable or a compatible cable designed for the device. Select the correct adapter for various devices. The built-in USB port allows for connecting to MICRO USB cables for compatible devices, USB-C cables, and cables for devices with a Lightning USB interface.

*To display the charging status on a mobile phone or digital device, connect it to the device after powering it on. Once the device indicates charging is complete, disconnect it. Do not charge external devices while the product itself is charging.

Notes: Before charging an external device, ensure the product itself has sufficient charge. Avoid charging the product and an external device simultaneously. For optimal battery preservation, disconnect the charging cable once the device is fully charged.

Precautions:

1. Utilize a USB charger with a 5V output or a computer USB port for charging.
2. Verify the compatibility of the charged device's voltage with this product before use.
3. In the event of extreme temperatures, discoloration, or unusual occurrences during use, charging, or storage, immediately cease usage and contact the supplier.
4. Ensure a full charge before initial use and subsequently every three months if not regularly used. It's typical for the product to feel warm post-use.
5. Confirm that the charging device indicates the charging status when connected, to ensure proper functionality.
6. Disconnect the charging cable from the fully charged device to conserve energy.
7. Misuse or improper use of the product could result in reduced longevity or damage, for which the manufacturer is not liable.

Frequently Asked Questions (FAQ):

Phenomenon	Causes
Unable to charge this product	1. Incorrect connection 2. Loose charging cable connector 3. Damaged charging cable 4. Other unspecified reasons
This product cannot charge other devices	1. Incorrect connection 2. Loose charging cable or adapter 3. Damaged charging cable or adapter 4. Voltage too low, please recharge 5. Product malfunction, contact your local dealer for assistance

Content of Harmful Substances in the Product

Part Description	Harmful Substances					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent Chromium (Cr(VI))	Polybrominated Biphenyls (PBB)	Polybrominated Diphenyl Ethers (PBDE)
Portable Power Source	×	○	○	○	○	○
Electrode	×	○	○	○	○	○
Data Cable (Type-C)	×	○	○	○	○	○
Data Cable (Micro USB)	○	○	○	○	○	○

This table is prepared in accordance with SJ/T11364.

- The content of the harmful substance in all homogeneous materials of the part is below the threshold limit set by GB/T26572.
- ×

Indicates that the content of the harmful substance in at least one homogeneous material of the component exceeds the threshold limit set by GB/T26572. Currently, there are no widely accepted alternative solutions in the industry, but it adheres to the environmental protection requirements of the European Union RoHS directive.

♻️ The number "5" within the recycling logo suggests that the environmentally conscious lifespan of this product, under typical use conditions, is 5 years.

Maintenance

1. Avoid exposing the product to water, fire, or extreme temperatures beyond the range of -10°C to +45°C. Keep out of reach of children.
2. Refrain from disassembling or altering the product as it could compromise the safety mechanisms and potentially cause overheating or combustion.
3. Do not attempt to open or damage the product through impact, friction, or pressure. If any defect is noticed, cease usage immediately.
4. Clean with a dry, soft cloth without the use of harsh cleaners or detergents.
5. If not in frequent use, store the power bank partially charged (around 50%) to prolong its lifespan. Full storage or complete depletion regularly can adversely affect longevity.

Warranty

Exclusion

-Porodo doesn't cover any damage caused by the normal use of the product over time during the warranty period.
-The Porodo warranty doesn't include coverage for improper use, deliberate damage, accidents, theft, carelessness, or any repairs done by unauthorized service centers.
-The power needs for each product are clearly stated on their packages. Please check these requirements against those of your country before buying. Porodo won't be responsible for any problems related to this.

For more info, please check:
porodo.net/warranty

Contact Us

If you have any questions about this Privacy Policy, please contact us at info@porodo.net
Website: porodo.net
Service Support: support@porodo.net
Instagram: [porodo](https://www.instagram.com/porodo)